




# Air Filter Information

Check air filters and filter gauges on a periodic basis and replace as needed. Filter gauges are located on the air canister (as an optional feature) or on the acoustical enclosure doors (standard feature). Dirty or clogged air filters can cause improper performance from the blower system.

Republic Blower Systems recommends that customers keep spare air filters in stock. Spare filters are also available from you local Republic Distributor. Call (800) 847-0380 to order filters.

## Replacement Filter Reference

Small Paper	340-1000	Small Polyester	340-2000
Large Paper	340-1002	Large Polyester	340-2002

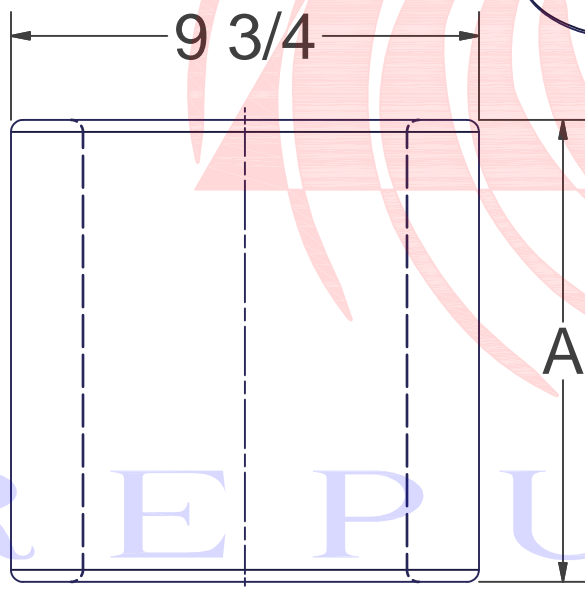

Paper Part No.	Polyester Part No.	Dimension "A"
340-1000	340-2000	9 5/8"
340-1002	340-2002	14 1/2"

## Replacement Filter Reference

Filter Type	CFM	Min. Temp. / Max. Temp.	Efficiency
Small Paper	880 CFM	Min. Temp. -15 Deg. F / Max. Temp. 220 Deg. F	99.9% efficiency to 10 Micron
Large Paper	1100 CFM	Min. Temp. -15 Deg. F / Max. Temp. 220 Deg. F	99.9% efficiency to 10 Micron
Small Polyester	880 CFM	Min. Temp. -15 Deg. F / Max. Temp. 220 Deg. F	99+% Efficiency to 10 Micron
Large Polyester	1100 CFM	Min. Temp. -15 Deg. F / Max. Temp. 220 Deg. F	99+% Efficiency to 10 Micron

Air Filter Element	FileElement
--------------------	-------------