



Position No. 5 is standard unless otherwise specified by customer. If at all possible, try to avoid Position No. 13-18 on 20HP blowers because of air filter and motor electric box interference.

RB800/RB1200HC Blower Positions	Blower1200BLoPos
---------------------------------	------------------